

Yealink VCR20 Datasheet

Introduction

 
You can use the VCR20 Remote Control to control the Yealink endpoint. VCR20 uses two AAA batteries (1.5V).

VCR20 Compatibility

For the VCR20 compatibility, refer to [Rooms Accessories Compatibility Lists](#).

Yealink VCR20


For MeetingBar A20/A30

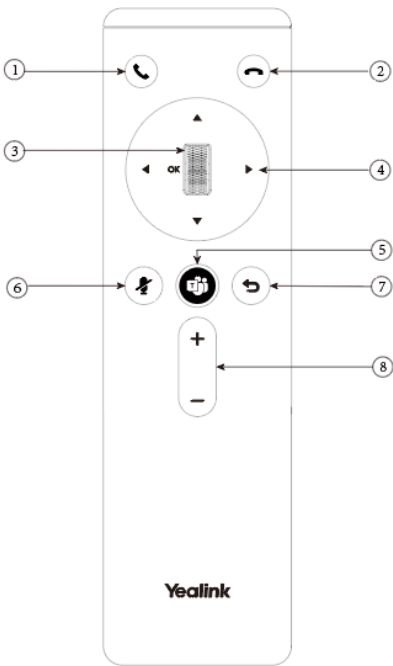

No.	Item	Description
1	Answer Key	Make or receive calls
2	End Key	End a call or exit the current meeting.
3	Scroll Wheel (OK Key)	- Long press the Teams Key to bring up the sidebar, enter Camera Control , and swipe up to zoom in the camera image - Long press the Teams Key to bring up the sidebar, enter Camera Control , and

		swipe down to zoom out the camera image - Press OK to confirm.
4	Navigation Key	Long press the Teams Key to bring up the sidebar, enter Camera Control , and pan and tilt the camera to adjust the viewing angle.
5	Teams Key	- On the home screen, press the Teams key to join the first meeting on the meeting list. - On the home screen or in a meeting, press and hold the Teams key for 5 seconds to open the sidebar.
6	Mute Ke	Mute or unmute the microphone.
7	Return Key	Return to the previous level.
8	Volume Key	Turn up/down the volume.

 For MVC/ZVC/MeetingBar A20/A30

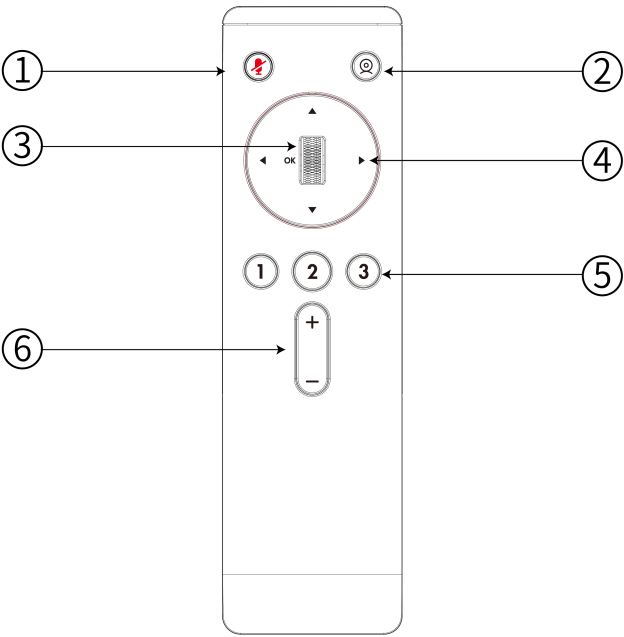

No.	Port Name	Description
1	Mute Key	Mute or unmute the microphone.
2	Tracki	Press and hold the Tracking Feature key to select a desired tracking mode. For which

	ng Featur e Key	Yealink UVC Cameras/Yealink Intelligent Cameras support tracking features, refer to Rooms Supported Features List for details.
3	OK Key	• Swipe up to zoom in on the camera image. • Swipe down to zoom out the camera image. • Press OK to confirm.
4	Navig ation Key	Pan and tilt the camera to adjust the viewing angle.
5	1/ 2/ 3 key	• Press and hold the number key to add/update the preset position. • Press the number key to apply for the preset position.
6	Volum e Key	Turn up/down the volume.